


Installation instructions

High-quality wood parts

68.01

Model 202

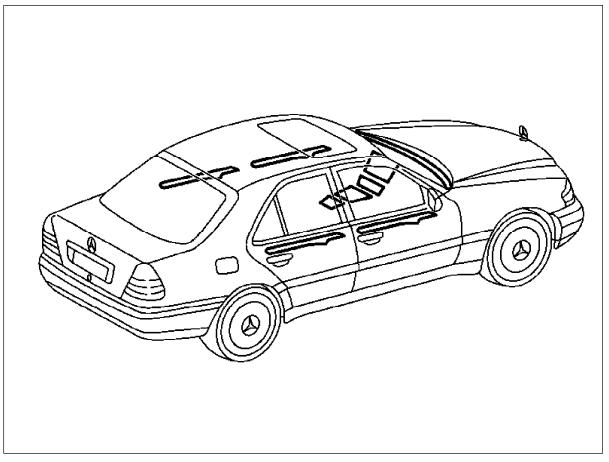

P68-5313-57


The installation instructi	ons are divided	l up into the	followina	sections
----------------------------	-----------------	---------------	-----------	----------

- A. General work
- B. Survey of high-quality wood parts
- C. Location and installation of high-quality wood parts in the vehicle

A. General work

Door lining on front doors	remove, install (72.10-1000E).
Door lining on rear doors	remove, install (72.10-1010E).
Radio	remove, install (82.60-7502EA).

B. Survey of high-quality wood parts

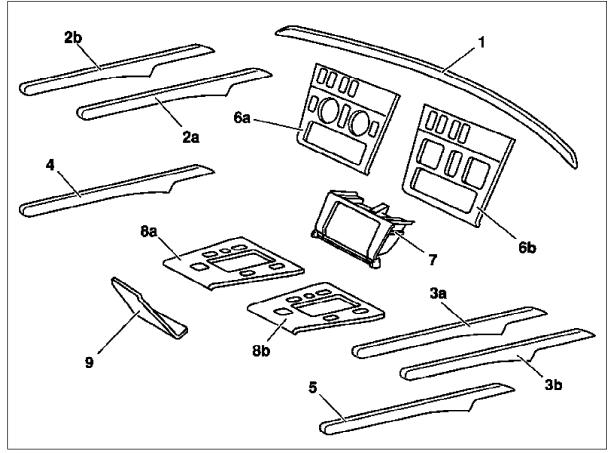


P68-5314-57

Survey of high-quality wood parts

1	Dashboard trim strip	6b	Trim panel for dashboard (automatic climate control)
2a	Door lining trim strip, front left	7	Ashtray (not required on vehicles with large
2b	Door lining trim strip, front left (with electrical seat		oddments tray)
	adjuster)	8a	Shift lever cover with dome
3a	Door lining trim strip, front right	8b	Shift lever cover without dome
3b	Door lining trim strip, front right (with electrical seat	9	Trim cover panel, oddments tray (not required on
	adjuster)		vehicles without dome)
4	Door lining trim strip, rear left		
5	Door lining trim strip, rear right		
6a	Trim panel for dashboard (air conditioner/production)		


C. Location and installation of high-quality wood parts in vehicle

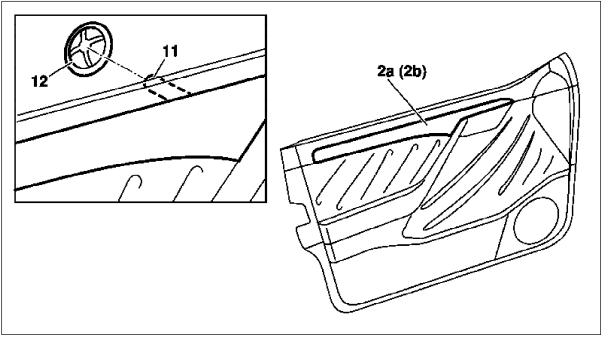

P68-5339-55

Location of high-quality wood parts

2a 2b	Door lining trim strip, front left Door lining trim strip, front left (with electrical seat adjuster)	11 12	Retaining pin Circlip
		Note	
			nbly of the door lining trim strips is identical on ont and rear doors.
Circlips (1	2)		re from retaining pins (11) of the standard door trim strip, front left.
Standard	door lining trim strip, front left	remov	e.
Door lining	g trim strip, front left (2a or 2b)	insert	
Circlips (1	2)	press adhes	on and secure on the retaining pins (11) with ive.

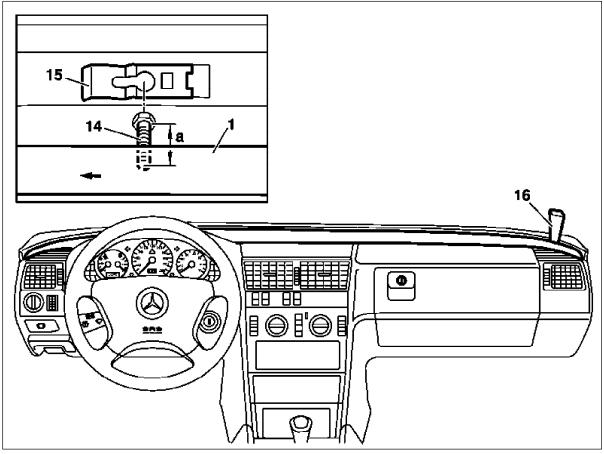

P68-5318-57

Location of high-quality wood parts

1	Dashboard trim strip	16	Wedge
14	Retaining pin	a	Dimension
15	Retaining clin		

 \triangle

Standard dashboard trim strip_______Standard dashboard trim strip______

The dashboard trim strip cannot be replaced on vehicles with Classic trim. pry out at right end using wedge (16). push to the right in the retaining clips (15) and remove.

Note


Prior to installation of the dashboard trim strip (1), the distances of the nuts on the retaining pins (14) (dimension a) are to be transferred from the standard dashboard trim strip.

Dashboard trim strip (1) with retaining pins (14) insert in the retaining clips (15).

Dashboard trim strip (1) push into the retaining clips (15) in the direction of the arrow.


Note

If the dashboard trim strip is loose or too tight, then the distances of the nuts on the retaining pins (14) must be readjusted.

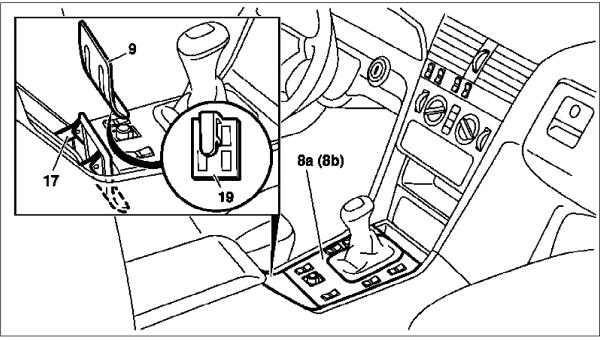

P68-5340-55


17 Cover 19 Hook	
detach and withdraw upwards.	
insert and engage at the bottom of the cover (17) with the hooks (19).	
secure.	
pry out.	
disconnect and remove standard shift lever cover.	
install.	
install.	

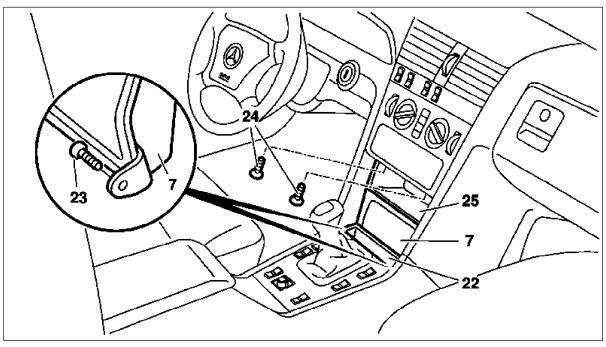

P68-5341-55

Location of high-quality wood parts

7 22 23	Ashtray Oddments tray Screw	24 25	Screw Upper tray
Oddment	ts tray (22)	_ remove	upwards.
	23 and 24)		v and remove upper tray (25) with production
		Note	
		the upp	ette box or CD box can be fitted in place of er tray, but the assembly or removal and ion is the same.
Upper tra	ay (25)	slide of	standard ashtray.
	7)	_ install a	nd install ashtray insert from the standard in the ashtray (7).
		Note	
			ews (24) are only to be screwed in after g the trim panel for the dashboard.
Upper tra	ay (25)	_ slide in	and screw in the screws (23).
		Note	
			correct seating of the upper tray in the of the ashtray (7).
Oddment	ts tray (22)	_ install fr	rom above.
	er cover		nd clip securely in place.

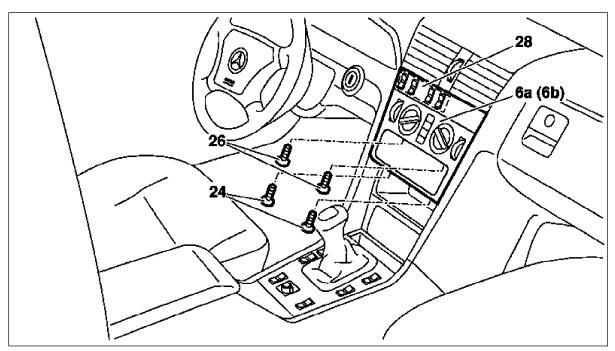

P68-5342-55

Location of high-quality wood parts

6a Trim panel for dashboard (air conditioner/standard) 6b Trim panel for dashboard (automatic climate control)	24 26 28	Screw Screw Switch strip
--	----------------	--------------------------------

Screws (26) Standard dashboard panel	unscrew remove and unclip switch strip (28).
	When installing the trim panel for the dashboard (6a or 6b), differences in the location of the switch recesses can occur. If necessary, change the switch base in the switch strip (28). The original position of the standard variant (heated rear window, central locking system and warning flasher system) must be retained.
Switch strip (28)	_ clip into dashboard trim panel (6a or 6b).
Dashboard trim panel (6a or 6b)	_ insert and screw in the screws (24 and 26).
Function check	_ perform.